

High performance portable creative sound system

TRK-P65EII


Operating guide
Bedienungsanleitung
Mode d'emploi
Istruzioni per l'uso
Gebruiksaanwijzing
Guia de operación
Bruksanvisning
Betjeningsvejledning
Guia de operação
Инструкция по эксплуатации

Before operating, please read these instructions completely
Bitte lesen Sie diese Bedienungsanleitung vor der Inbetriebnahme aufmerksam durch
Veuillez lire ces instructions dans le détail avant de mettre l'appareil en fonction
Prima dell uso, leggere attentamente le seguenti istruzioni
Lees deze gebruiksaanwijzing aandachtig door alvorens ingebruikname.
Lea por favor completamente entas instrucciones antes de poner en funcionamiento este aparato
Läs bruksanvisningen noggrant innan apparaten anvands!
Læs venligst denne betjeningsvejledning igennem, for De tager apparatet i brug
Antes de fazer funcionar, não se esqueca de lar completamente estas instrucões
Перед эксплуатацией следует внимательно прочесть данную инструкцию.


## POWER REQUIREMENTS STROMVERSORGUNG CONDITIONS D'ALIMENTATION ALIMENTAZIONE VOEDING

REQUISITOS DE POTENCIA STRÖMFÖRSÖRJNING STRØMFORSYNING REQUERIMENTOS DE ALIMENTAÇÃO ТРЕБОВАНИЯ К ПИТАНИЮ


To use household current
Netzbetrieb
Fonctionnement sur le courant secteur
Uso con la corrente di rete
Wisselstroomvoeding
Uso con corriente doméstica
Nätdrift
Lysnetdrift
Uso com a corrente elétrica
Для использования домашнего тока.

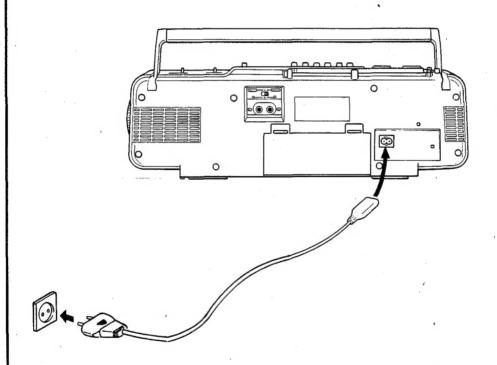

OBS: Strömbrytaren är sekundärt inkopplad och skiljer ej, i frånslaget läge, apparaten från nätet.

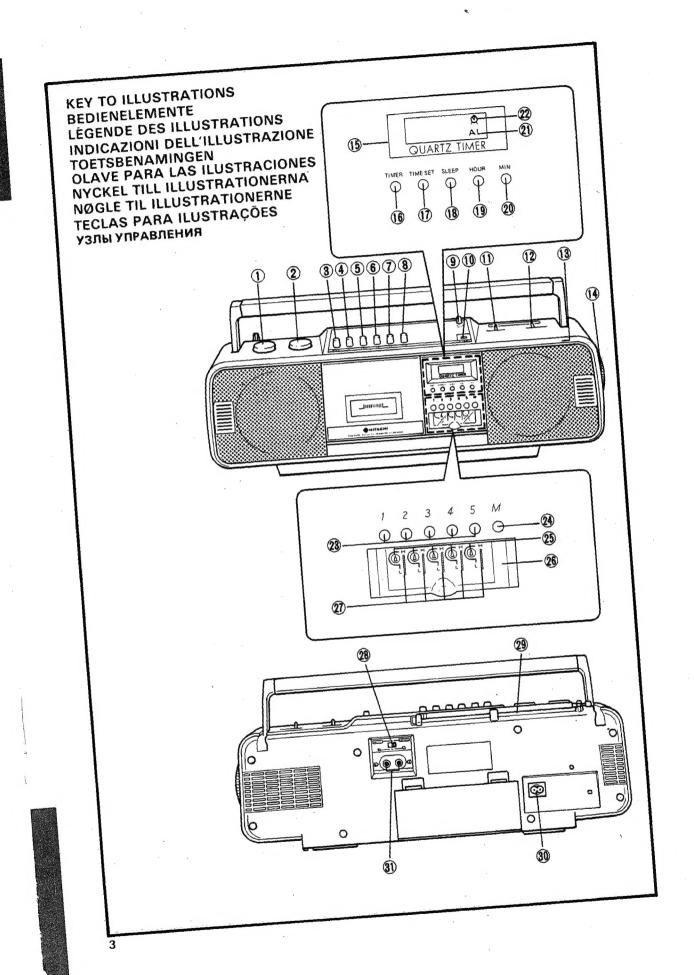

To use batteries
Batteriebetrieb
Fonctionnement sur piles
Uso con le pile
Batterijvoeding
Uso con pilas
Batteridrift
Brug af batterier
Uso com pilhas
Для использования батарей.

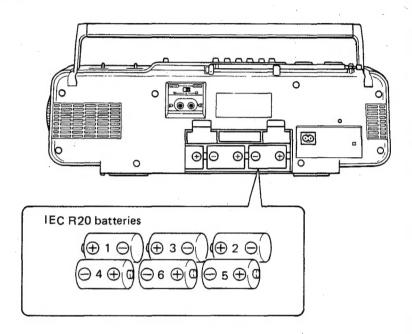

**NOTE**: The volume drops and the tape speed gets slow as the batteries are exhausted; replace the batteries when this happens.

**ZUR BEACHTUNG**: Bei Batteriespannungsabnahme wird die Lautstärke geringer und die Bandgeschwindigkeit nimmt ab; in diesem Falle die Batterien auswechseln.

**REMARQUE**: Le volume diminue et la vitesse de défilement de la bande ralentit lorsque les piles sont épuisées; dans ce cas, remplacer les piles.

**NOTA**: Il volume e la velocità del nastro si riducono con lo scaricarsi delle pile. Sostituire allora le pile.

**OPMERKING**: Wanneer de batterijen uitgeput raken, zal het volume verminderen en de snelheid van het bandtransport verlagen. Als dit voorkomt, moet u de batterijen vernieuwen.

**NOTA**: Baja el volumen y disminuye la velocidad de la cinta a medida que se agotan las pilas; cuando ocurra esto, cambie las pilas.

OBSERVERA: Byt batterier när ljudnivån och bandhastigheten sjunker.


BEMÆRK: Udskift batterierne når lydniveauet og båndhastigheden mindskes.

**NOTA:** O volume diminui e a velocidade do toca-fitas fica mais lenta quando as pihas estão gastas; neste caso, substitua as pilhas.

**ПРИМЕЧАНИЕ:** Громкость уменьшается и скорость ленты снижается при разряжении батарей: в этом случае заменить батареи.

How to insert battery for the clock Einlegen der Batterien in die uhr Mise en place de la pile pour l'horloge Inserimento della batteria per l'orologio Plaatsen van de batterij voor de klok Cómo insertar la pila para el reloj

lläggning av kockans batteri Således lagges batteri i uret Inserçao da bateria do relógio Постабление батарейку часов

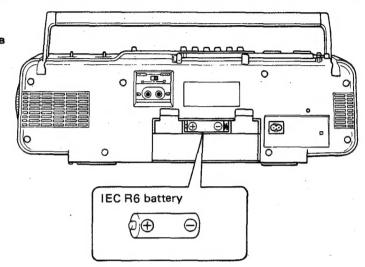

**NOTE:** When the battery for the clock becomes weak, the time indication will light only faintly. The battery should then be replaced with a new one. As the time indication will disappear when taking out the battery, please reset the time.

HINWEIS: Wenn die Batterien der Uhr nachlassen, erscheint die Zeitanzeige nur noch schwach. In diesem Fall muß die Batterie ausgetauscht werden. Beim Entnehmen der Batterie verschwindet die Zeitanzeige; diese muß nach dem Batteriewechsel neu eingestellt werden.

**REMARQUE:** Lorsque la pile de l'horloge s'épuise, l'heure n'apparaît plus que faiblement. Dans ce cas, remplacer la pile par une neuve. Comme l'affichage de l'heure disparaît lorsque la pile est enlevée, veiller à remettre l'horloge à l'heure.

NOTA: Quando la batteria per l'orologio si scarica, l'indicazione oraria lampeggia debolmente. A questo punto la batteria deve essere sostituita. Poichè l'indicazione oraria scompare quando si estrae la batteria, regolare di nuovo l'orario.

**OPMERKING:** Wanneer de klokbatterij uitgeput raakt, licht de tijdsaanduiding nog maar zwak op. Vervang dan de batterij door een nieuwe. Bij het verwijderen van de batterij dooft de tijdsaanduiding. Stel de tijd opnieuw in nadat u de nieuwe batterij geplaatst heeft.

NOTA: Cuando la pila para el reloj se debilite, la indicación de la hora se iluminará débilmente. En tal caso la pila deberá reemplazarse por otra nueva. Como la indicación de la hora desaparecerá al extraer la pila, vuelva a poner el reloj en hora.

ANMARKING: När kockans batteri blir svagt, kommer tidindikeringen att lysa svagt. Batteriet skall då bytas ut mot ett nytt. Eftersom indikeringen kommer att försvinna när batteriet tas ur, skall du ställa in tiden igen.

**BEMARK:** Når urets batteri bliver svagt, vil tidsangi velsen lyse ganske svagt. Batteriet udskiftes så med et nyt. Uret må stilles på ny efter udskiftningen, da tidsangivelsen forsvinder, når batteriet tages ud.

NOTA: Troque a bateria do relógio quando a hora estiver indicada com menos intensidade. Como a remoção da bateria apaga o ajuste do relógio, este deverá ser acertado novamente à hora atual.

**ПРЕМЕЧАНИЕ:** Когда батарейка часов ослабляется дисплей времени неочетливо горит. Заменить слабую батарейку новей. Так как дисплей времени исчезается во время обмена батарейками сново переставить часы.

## **PRECAUTIONS**

- When the unit is not used for a long period of time, disconnect the AC power lead from the AC outlet and remove the batteries.
- Do not leave the exhausted batteries in the battery compartment, or they may corrode and cause damage.
- Do not leave the unit in direct sunlight or extremely hot or humid places.
- Never use any strong detergents or solvents for cleaning the cabinet of this unit, because this could damage the surface finish.
- We recommend you not to use a C-120 cassette tape to prevent from breakage or jamming.
- · Avoid using or placing this unit near sources of high temperature.
- The appliance should not be used near the sea, sand and where there is fine dust.
- If the CD player is operated while you are receiving a radio broadcast, you may hear noise on a radio broadcast. In this case, turn the operate switch or the power switch of the CD player " () " "OFF"

## **KEY TO ILLUSTRATIONS**

### See page 3

- 1 TONE CONTROL
- ② VOLUME CONTROL
- (3) PAUSE BUTTON
- 4 STOP/EJECT BUTTON
- (5) FAST FORWARD BUTTON
- **(6) REWIND BUTTON**
- (7) PLAYBACK BUTTON
- (8) RECORD BUTTON
- 9 TIMER MODE BUTTON When using the timer function . . . . . . . ON When not using the timer function . . . . . . OFF
- **10 TIMER MODE INDICATOR**
- 1) FUNCTION SELECTOR
- (12) BAND SELECTOR
- (13) INNER MICROPHONE (MONAURAL)
- 14 TUNING CONTROL
- 1 DIGITAL CLOCK INDICATOR


- 16 TIMER BUTTON
- 17 TIME SET BUTTON
- **18 SLEEP BUTTON**
- (19) HOUR BUTTON
- **20 MINUTE BUTTON**
- 21) TIME INDICATION OF THE TIMER
- ② TIMER FUNCTION INDICATOR
- 23 FM PRESET BUTTONS
- **24** FM MANUAL BUTTON
- **25** FM PRESET TUNING INDICATOR
- **26** FM PRESET TUNING KNOBS COVER
- ② FM PRESET TUNING KNOBS
- 28 FM MODE/RIF SELECTOR
- **29 TELESCOPIC ANTENNA**
- 30 AC SOCKET
- 3) CD/LINE IN SOCKET

# HOW TO USE THE DIGITAL CLOCK

When inserting the battery for the clock, the actual time and the time indicated on the timer will be 1:00. Before using the timer, make sure to adjust the actual time.

## HOW TO SET THE ACTUAL TIME

Example: How to set the time to 15.05

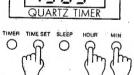

Keep depressed.

#### HOUR BUTTON

When setting the "HOUR", keep the TIME SET BUTTON depressed and press the HOUR BUTTON. While pressing the button, the indicated figures will change from "0" - "23". When the desired "HOUR" approaches, press the HOUR BUTTON lightly a few times till you reach the desired time.

### MINUTE BUTTON

When setting the "MINUTE", keep the TIME SET BUTTON depressed and press the MINUTE BUTTON. While pressing the button, the indicated figures will change from "00" — "59". When the desired "MINUTE" approaches, press the MINUTE BUTTON lightly a few times till you reach the desired time.

■ To set the time exactly, keep the TIME SET BUTTON depressed and press the MINUTE BUTTON at the moment you hear the time signal on the radio.

When the TIMER MODE BUTTON is set to "ON", the TIMER MODE INDICATOR lights up and the operation of this unit stops. When the timer preset time is reached, the unit will start automatically.

### HOW TO SET THE TIME OF THE TIMER

The power supply to this timer will be automatically turned off approximately 2 hours after operation.

### Example: How to set the time to 6:30



TIMER TIMESET SLEEP HOUR MIN

When you want to listen to a radio broadcast, play a tape or make a recording at a certain time, keep the TIMER BUTTON depressed (the time indication of the timer will light up) and set the desired time by pressing the HOUR BUTTON and the MINUTE BUTTON.


#### **NOTES**

- The timer function indicator in clock display will blink during timer operation.
- If the TIMER MODE BUTTON is left in "ON" (---)
  position after timer operation, the timer will be activated
  the following day at the same time.
- How to check the set time of the timer By pressing the TIMER BUTTON, the timer display will light up and the set time will be indicated.

# SETTING AND CHECKING THE SLEEP TIME

■The sleep function of the unit can be used for a maximum of 1 hour, after which the power will be automatically turned off.

#### Example: How to set it for 30 minutes

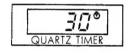



When you want to listen to a radio broadcast or play a tape while falling asleep, keep the SLEEP BUTTON depressed and set the desired sleep time by depressing the MINUTE BUTTON.

#### **NOTES**

- When setting a sleep time of 1 hour, only depress the SLEEP button.
- If the TIMER BUTTON is depressed during sleep time operation, the sleep function will be disengaged and the timer will enter stand-by mode.
- How to check the sleep time
  If the SLEEP BUTTON is depressed during sleep timer operation, the remainder of the set sleep time will be indicated.

Regarding the various operations of the timer function, please refer to the illustration on pages 43-48.

#### FM PRESET

- 1. Press one of the FM PRESET BUTTONS and rotate the FM PRESET TUNING KNOB with the same number as the FM PRESET BUTTON to tune to any required broadcast. You can preset a total of five\_stations using BUTTONS 1 to 5.
- Use the FM PRESET TUNING KNOB with the FM PRESET TUNING INDICATOR in the range between L and H. When the indicator is in the vicinity of L, the received frequency is 87.5 MHz, and when it is in the vicinity of H, the received frequency is 108 MHz.
- 3 If you cannot satisfactorily receive a preset station due to the effect of temperature or because the signal strength has changed, readjust the FM PRESET TUNING KNOB.

- FAST FORWARD AND REWIND: To rapidly advance the tape, press the FAST FORWARD button. To rewind the tape, press the REWIND button. Press the STOP/EJECT button after fast forwarding or rewinding.
- PAUSE BUTTON: If you want to stop the tape temporarily during recording or playback, press the PAUSE button. To release the pause mode, press the PAUSE button again.
- AUTO STOP MECHANISM: When the tape comes to its end during playback or recording, the tape stops automatically and the buttons are released to their original positions.
- VARIABLE MONITOR: The radio broadcast, CD player connected to this unit, or other stereo source may be heard at any desired volume and graphic equalizer controls setting without affecting the recording because of the "Variable monitor" device.
- . FM MODE/RIF SELECTOR:

FM MODE (FM only): Set the selector to STEREO when the station is broadcasting a stereo program. When an FM stereo signal is too weak or noisy for enjoyable stereo listening, set this selector to MONO to reduce the noise.

RIF (AM only): If beat noise is audible during recording of an MW or LW radio program, change this switch over to reduce this noise.

• TIMER MODE INDICATOR: This lights up when the TIMER MODE BUTTON is depressed and set to "ON" ( ) position.

# RECORD-PREVENT DEVICE AND MAINTENANCE

See page 36

OPERATION

See pages 37 - 42.

## SPECIFICATIONS

### **GENERAL SPECIFICATIONS**

Dames Cumples

AC: 220V, 50 Hz

Power Supply:

DC: 9V [IEC R20 x 6 or equivalent] (option)

Battery for clock

DC: 1.5V [IEC R6 x 1] (option)

Power (mains) Consumption:

10W

Speakers:

10 cm, 8 ohms x 2

Out put:

10W P.M.P. (AC operation) 1.2W/CH (DC 10% T.H.D.)

Dimensions:

480 (W) x 150(H) x 110 (D) mm

Weight:

2.95 kg (with batteries)

**RADIO SECTION** 

Circuit System:

FM/SW/MW/LW 4-band superheterodyne

Tuning Range:

FM: 87.5 to 108 MHz SW: 6.0 to 18.0 MHz MW: 530 to 1605 kHz

MW: 530 to 1605 kHz LW: 150 to 285 kHz

Antenna (Aerials):

FM/SW: Telescopic antenna (aerial)

MW/LW: Built-in ferrite-core antenna (aerial)

#### TAPE RECORDER SECTION

Recording System:

AC bias

Erasing System:

Magnet


Playback Frequency Response:


80 to 10,000 Hz (Normal tape)


Input Sensitivity and Impedance:

CD/Line in: 600 mV, 100 kohm

Specifications are subject to change for performance improvement without notice.

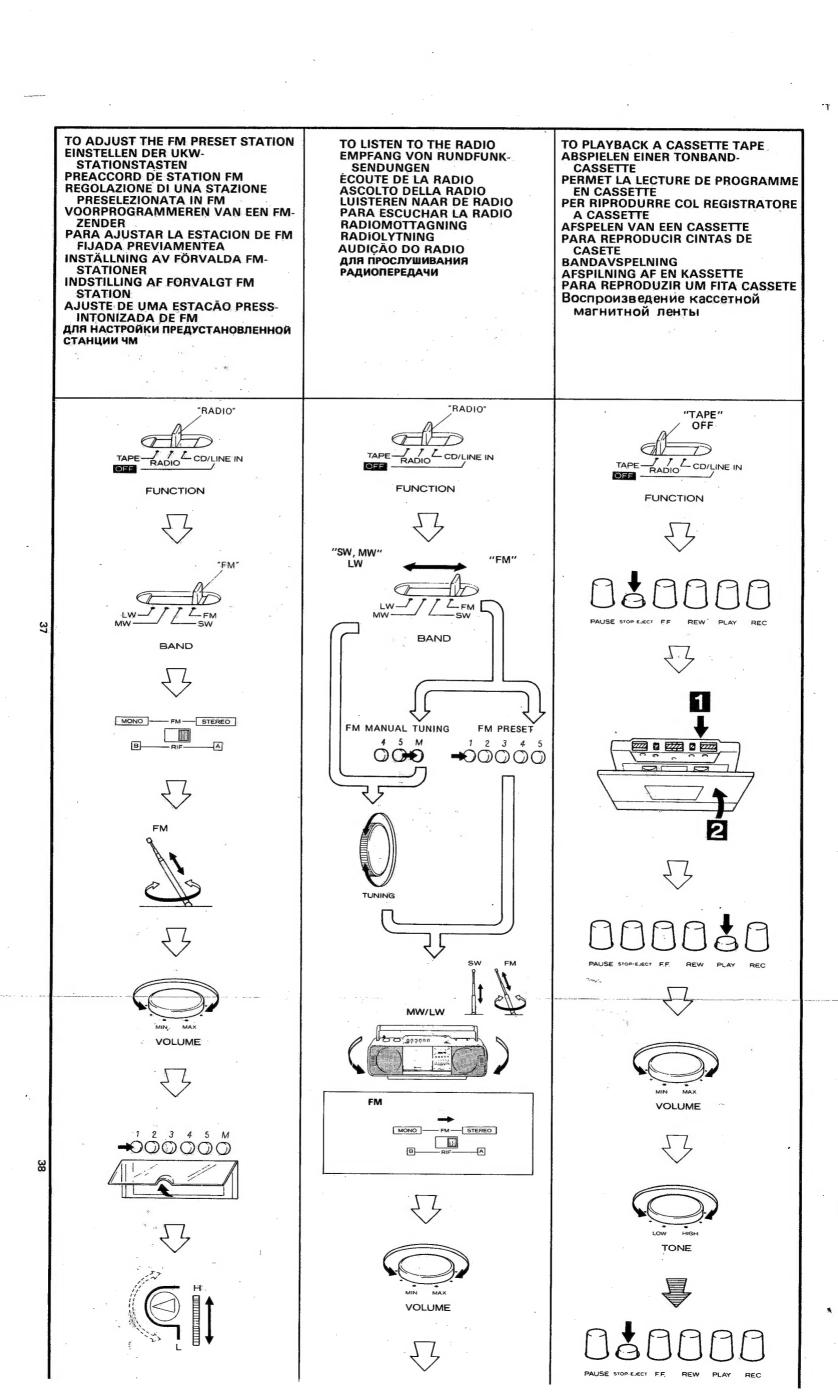

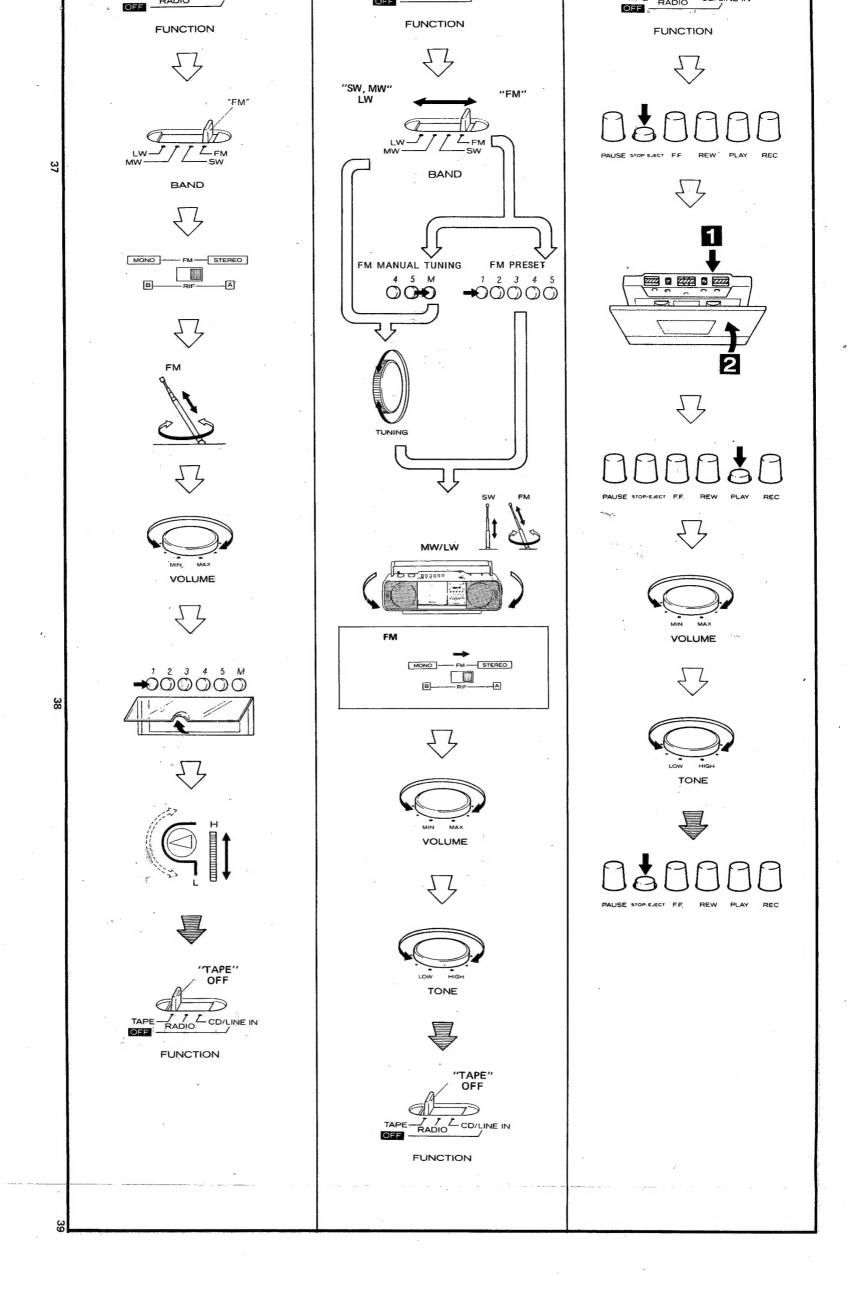

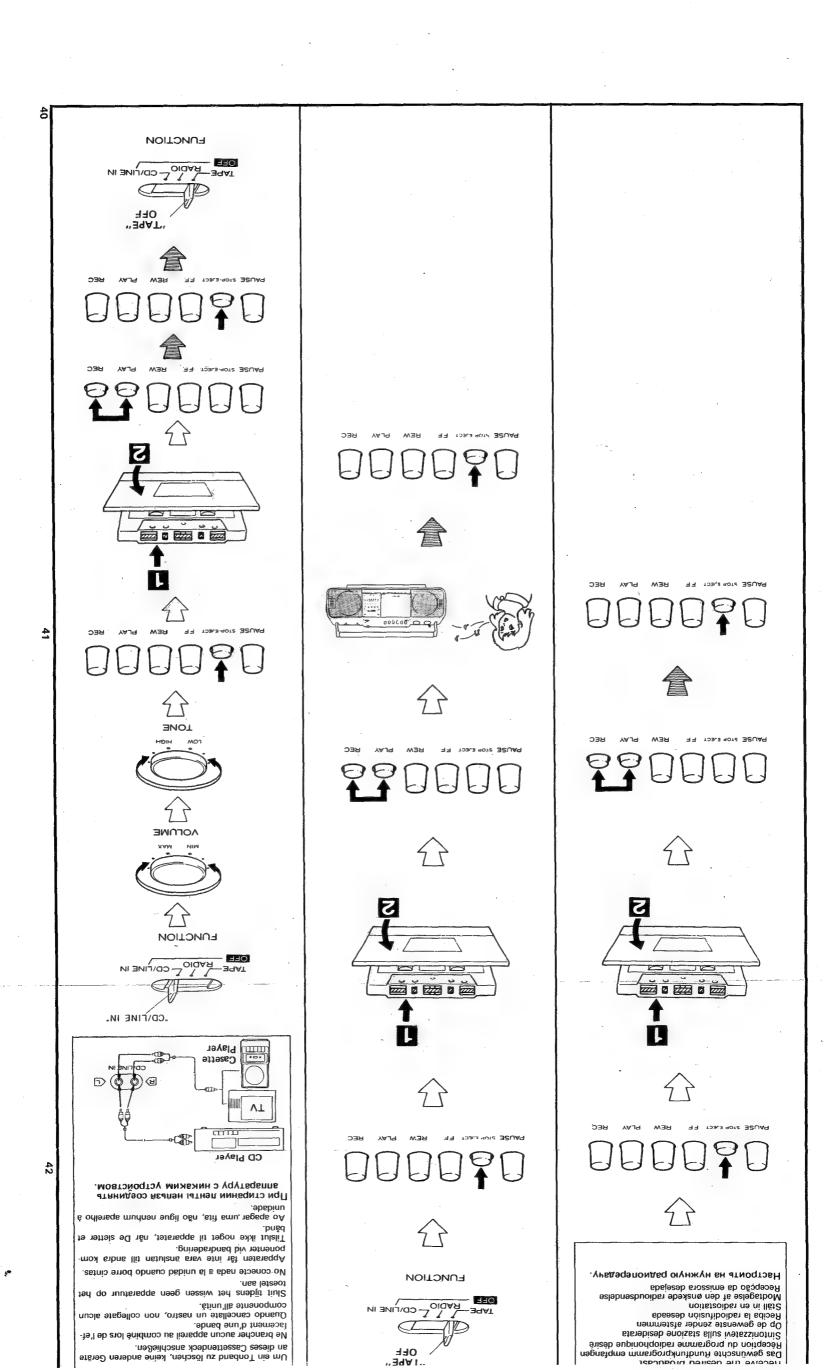

RECORDING RADIO BROADCASTS
AUFNAHME VON RUNDFUNKSENDUNGEN
ENREGISTREMENT DES EMISSIONS
DE RADIO
REGISTRAZIONE DELLE RADIOTRASMISSIONI
OPNEMEN VAN RADIOUITZEN-

DINGEN
GRABACION DE UNA RADIODIFUSION
INSPELNING AV RADIOPROGRAM
INDSPILNING AF RADIO

UDSENDELSER GRAVAÇÃO ATRAVÉS DAS EMISSORAS DE RADIO ЗАПИСИ РАДИОПЕРЕДАЧИ RECORDING FROM INNER
MICROPHONE
AUFNAHME ÜBER EINGEBAUTES

MIKROFON
ENREGISTREMENT AVEC LE
MICROPHONE INCORPORE
REGISTRAZIONE DAL MICROFONO
INCORPORATO


INCORPORATO
OPNEMEN MET DE INGEBOUWDE
MIKROFOON


GRABACION DESDE UN MICROFONO INTERNO INSPELNING MED INBYGGD MIKROFON

INDSPILNING GENNEM DEN INDBYG-GEDE MIKROFON GRAVAÇÃO ATRAVÉS DO


MICRÓFONE EMBUTIDO ЗАПИСЬ ЧЕРЕЗ ВНУТРЕННИЙ МИКРОФОН. TAPE ERASING AND RECORDING FROM **CD AND OTHER SYSTEMS** TONBAND-LÖSCHUNG UND AUF-NAHME VON EINEM CD-SPIELER ODER **EINEM ANDEREN AUDIO-SYSTEM EFFACEMENT DE BANDE ET ENREGIS** TREMENT D'UN LECTEUR DE DISQUE COMPACTET D'AUTRES COMPOSANTS CANCELLAZIONE DI NASTRI E REGIST-RAZIONE DA CD ED ALTRI SISTEMI BANDWISSEN EN OPNEMEN VAN CD-SPELER EN ANDERE SYSTEMEN **CANCELACION DE CINTA Y GRABA** CION DESDE DC Y OTROS SISTEMAS BANDRADERING OCH INSPELNING FRÅN CD OCH ANDRA KOMPONENTER **BÅNDSLETNING OG INDSPILNING FRA CD-AFSPILLER OG ANDRE SYSTEMER** GRAVAÇÃO E APAGAMENTO DE FITAS DO CD E OUTROS SISTEMAS СТИРАНИЕ ЛЕНТЫ И ЗАПИСЬ С КД И ДРУГИХ СИСТЕМ

Receive the desired broadcast
Das gewünschte Rundfunkprogramm empfangen
Réception du programme radiophonique désiré
Sintonizzatevi sulla stazione desiderata
Op de gewenste zender afstemmen
Reciba la radiodifusión deseada
Ställ in en radiostation
Modtagelse af den ønskede radioudsendelse
Recepção da emissora desejada
Настроить на нужную радиопередачу.

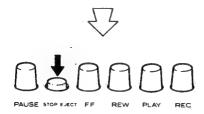

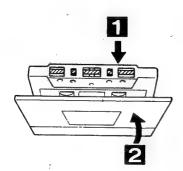




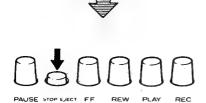





**FUNCTION** 




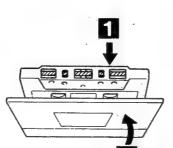

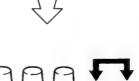

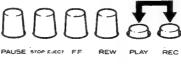



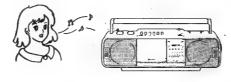



When erasing a tape, do not connect anything to

Um ein Tonband zu löschen, keine anderen Geräte an dieses Cassettendeck anschließen.

Ne brancher aucun appareil au combiné lors de l'effacement d'une bande.

Quando cancellate un nastro, non collegate alcun

componente all'unità.
Sluit tijdens het wissen geen apparatuur op het

toestel aan.


No conecte nada a la unidad cuando borre cintas.


Apparaten får inte vara anslutan till andra komponenter vid bandradering.


Tilslut ikke noget til apparatet, når De sletter et bånd.

Ao apagar uma fita, não ligue nenhum aparelho à unidade.

При стирании ленты нельзя соединять аппаратуру с никаким устройством.

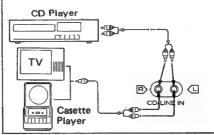

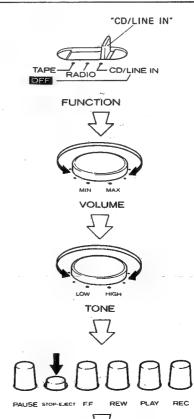

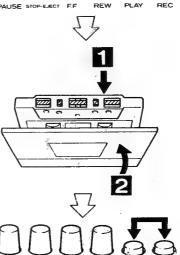

FOR RECORDING WHEN YOU ARE OUT. ZUM UNBEAUFSICHTIGTEN AUFNEHMEN. ERREGISTREMENT DECLENCHE PAR MINUTERIE PER REGISTRAZIONI MENTRE SI E

ASSENTI. **VOOR OPNEMEN WANNEER U AFWEZIG** 

PARA GRABAR CUANDO SE ENCUENTRE FÖR INSPELNING NÄR DU INTE ÄR

TIL OPTAGELSE, NÅR DE IKKE KAN VÆRE TILL SIEDE.

PARA EFETUAR GRAVAÇÕES DURANTE A SUA AUSÊNCIA.

ЗВУКОЗАПИСЬ ВКЛЮЧЕНА ТАЙМЕРОМ

FOR USE AS AN ALARM. ZUR VERWENDUNG ALS ALARMGEBER. UTILISATION COMME REVEIL PER L'USO COME SVEGLIA. VOOR GEBRUIK ALS EEN WEKKER

PARA EMPLEAR COMO ALARMA USING A RADIO BROADCAST AS AN

ALARM. RADIOSENDUNG ALS ALARMSIGNAL. REVEIL AU SON D'UNE EMISSION RADIO-PHONIQUE.

USO DEL SUONO DI UNA TRASMISSIONE RADIO COME SVEGLIA. GEWEKT WORDEN DOOR HET GELUID VAN DE RADIO

EMPLEO DE UN PROGRAMA DE RADIO-DIFUSION COMO ALARMA ANVÄNDNING AV EN RADIOSÄNDNING SOM VÄCKNINGSLJUD.

VÆKNING MED MUSIK FRA RADIOEN. UTILIZAÇÃO DO RÁDIO COMO ALARME. ИСПОЛЗОВАНИЕ РАДИОПЕРЕДАЧИ БУДИЛЬНИКОМ

FÖR ANVÄNDNING SOM VÄCKNINGS-**FUNKTION** ANVENDELSE SOM VÆKKER PARA O UTILIZAR COMO ALARME. ЗА ИСПОЛЗОВАНИЕ БУДИЛЬНИКОМ

USING A TAPE AS AN ALARM. BANDAUFNAHMEN ALS ALARMSIGNAL. REVEIL AU SON D'UNE BANDE MAGNE-TIQUE. USO DEL SUONO DI UNA CASSETTA COME

SVEGLIA. GEWEKT WORDEN DOOR HET GELUID VAN

**EEN CASSETTE** EMPLEO DE UN CASETE COMO ALARMA ANVÄNDNING AV ETT KASSETTBAND SOM VÄCKNINGSLJUD.

VÆKNING MED MUSIK FRA ET BÅND. UTILIZAÇÃO DO GRAVADOR COMO

ИСПОЛЗОВАНИЕ КАССЕТА БУДИЛЬНИКОМ

Tune to the station that you want to record when you are out

Auf den gewünschten Sender einstellen, Accorder la station que l'on souhaite enregistrer par minuterie.

Sintonizzare la stazione che si desidera registrare mentre si è assenti. Stem af op het radiostation dat u wilt opnemen wanneer u afwezig bent. Sintonica la emisora que desee grabar

cuando se encuentra ausente Ställ in den station som du vill spela in när du inte är hemma. Stil ind på den ståtion. De vil optage,

medens De er borte. Sintonize a estação a ser gravada para a gravação activada pelo temporizador. Настроить станцию, которую хочется


записать таймером


Set the timer to the desired time. Den Timer auf die gewünschte Zeit

Régler la minuterie sur le moment souhaité

Regolare il timer all'orario desiderato. Stel de schakelkick op de gewenste inschakeltijd in.

Programe el temporizador a la hora deseada. Ställ in timern på den önskade tiden. Indstil timeren til det enskede tidspunkt Ajuste o temporizador para a hora desejada. Регулировать таймер на желанное время.

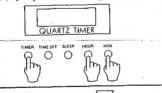

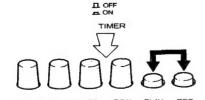

Recording will begin at the set time. Die Aufnahme beginnt zur eingestellten

L'enregistrement va commencer au moment préréglé.

La registrazione inizia all'orario fissato. Het opnemen begint op de vooringestelde La grabación se iniciará a la hora deseada.

Inspelningen kommer att startas vid den inställda tiden. Optagelsen vil begynde på det indstillede

tidspunkt. A gravação será iniciada na hora ajustada.

Tune to the station of your choice. Den gewünschten Sender einstellen. Accorder la station de son choix Sintonizzare la stazione desiderata. Stem op het gewenste station af. Sintonice la emisora que desea. Ställ in den statior du vill lyssna till. Stil ind på den ønskede station. Sintonize a estação desejada Настроить желанную радиостанцию.



Set the timer to the desired time Den Timer auf die gewünschte Zeit einstellen.

Régler la minuterie sur le moment souhaité.

Regolare il timer all'orario desiderato. Stel de schakelklok op de gewenste wektijd

Programe el temporizador a la hora deseada. Ställ in timern på den önskade tiden. Indstil timeren til det ønskede tidspunkt. Ajuste o temporizador à hora desejada. Регулировать таймер на желанное время.





Reception of the radio station will begin at the set time Der Radioempfang beginnt zur eingestellten

La réception de la station radiophonique va commencer au moment préréglé. La ricezione della stazione radio inizia

all'orario fissato. Het geluid van de radio is nu op de ingestelde wektijd te horen. La recepción del programa de radiodifusión se iniciará a la hora progra-


Mottagning av radicsändningen kommer att startas vid den inställda tiden.

Radiomodtagelsen vil begynde på de instillede tids punkt. A recepção da estação desejada será ini-

ciada na hora do ajuste. Прием радиостанции начинается на регулированном времени.

When you wish to turn off the radio. Wenn das Radio ausgeschaltet werden soll. Si l'on souhaite mettre la radio hora tension, appuyer sur la touche de minuterie. Quando si desidera spegnere la radio. Voor het uitschakelen van de radio. Cuando desee desconectar la radio. När du vill stänga av radion. Slukning af radioen. Quando desejar desligar o rádio.

Если хочется послумать радио.

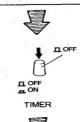

Insert the tape of your choice. Das gewünschte Band einlegen. Insérer la cassette de son choix. Inserire la cassetta desiderata. Steek de gewenste cassette in het apparaat. Inserte el casete que desee Lägg i det kassettband du vill lyssna till. læg det enskede bånde i. Insira o cassette desejado. Поставить желанный кассет.




Set the timer to the desired time Den Timer auf die gewünschte Zeit einstellen.

Régler la minuterie sur le moment souhaité.

Regolare il timer all'orario desiderato Stel de schakelklok op de gewenste wektijd

Programe el temporizador a la hora deseada Ställ in timern på den önskade tiden. Indstil timeren til det ønskede tidspunkt. Ajuste o temporizador à hora desejada. Регулировать таймер на желанное время.

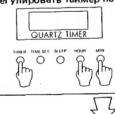







The tape will begin playing at the set time. Die Bandwiedergabe beginnt zur eingestellten Zeit.

La bande sera reproduite au moment pré-


La riproduzione della cassetta inizia all'orario fissato. Het geluid van de cassette is nu op de


ingestelde wektijd te horen. El casete se reproducirá a la hora programada.

Bandavspelningen kommer att startas vid den inställda tiden. Båndafspilningen vil begynde på det indstillede tidspunkt.

A reprodução da fita será iniciada na hora do ajuste.

Кассет прослушивается на желанном времени.

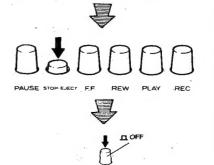

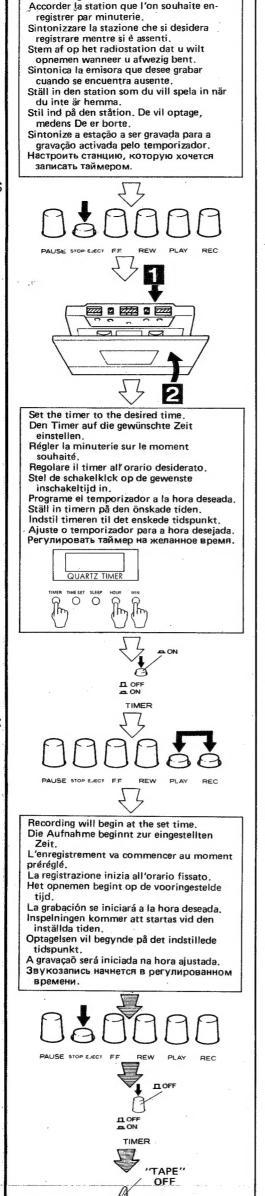

TAPE RADIO CD/LINE IN **FUNCTION** 

Accorder la station de son choix. Sintonizzare la stazione desiderata. Stem op het gewenste station af. Sintonice la emisora que desea Ställ in den statior du vill lyssna till. Stil ind på den ønskede station. Sintonize a estação desejada. Настроить желанную радиостанцию.

Set the timer to the desired time. Den Timer auf die gewünschte Zeit

einstellen Régler la minuterie sur le moment souhaité.

Regolare il timer all'orario desiderato. Stel de schakelklok op de gewenste wektijd

Programe el temporizador a la hora deseada. Ställ in timern på den önskade tiden. Indstil timeren til det ønskede tidspunkt Ajuste o temporizador à hora desejada. Регулировать таймер на желанное время.





Reception of the radio station will begin at the set time. Der Radioempfang beginnt zur eingestellten

Zeit. La réception de la station radiophonique va commencer au moment préréglé. La ricezione della stazione radio inizia

all'orario fissato. Het geluid van de radio is nu op de ingestelde wektijd te horen. La recepción del programa de radiodifusión se iniciará a la hora progra-

mada. Mottagning av radicsändningen kommer att startas vid den inställda tiden.

Radiomodtagelsen vil begynde på de instillede tids punkt. A recepção da estação desejada será ini-

ciada na hora do ajuste. Прием радиостанции начинается на регулированном времени.

When you wish to turn off the radio. Wenn das Radio ausgeschaltet werden soll. Si l'on souhaite mettre la radio hora tension, appuyer sur la touche de minuterie. Quando si desidera spegnere la radio. Voor het uitschakelen van de radio. Cuando desee desconectar la radio.

När du vill stänga av radion. Slukning af radioen. Quando desejar desligar o rádio. Если хочется послумать радио.



OFF ON

**FUNCTION** 

Insérer la cassette de son choix. Inserire la cassetta desiderata. Steek de gewenste cassette in het apparaat. Inserte el casete que desee. Lägg i det kassettband du vill lyssna till. læg det enskede bånde i. Insira o cassette desejado. Поставить желанный кассет.




Set the timer to the desired time. Den Timer auf die gewünschte Zeit


Régler la minuterie sur le moment souhaité.

Regolare il timer all'orario desiderato. Stel de schakelklok op de gewenste wektijd

Programe el temporizador a la hora deseada. Ställ in timern på den önskade tiden, Indstil timeren til det ønskede tidspunkt. Ajuste o temporizador à hora desejada. Регулировать таймер на желанное время.

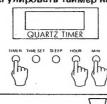



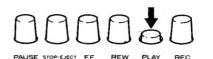



The tape will begin playing at the set time. Die Bandwiedergabe beginnt zur eingestellten Zeit

La bande sera reproduite au moment pré-

réglé. La riproduzione della cassetta inizia all'-

orario fissato. Het geluid van de cassette is nu op de ingestelde wektijd te horen.

El casete se reproducirá a la hora programada.

Bandavspelningen kommer att startas vid

den inställda tiden. Båndafspilningen vil begynde på det indstillede tidspunkt.


A reprodução da fita será iniciada na hora do ajuste.

Кассет прослушивается на желанном времени.







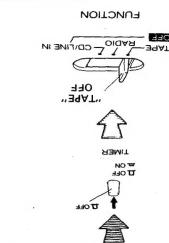

КОГДА КОНЧАВТСЯ ТЕЧЕНИЕ СПАЛЬНОГО Устройство автоматически выключается maticamente na hora programada. A energia será cortada do aparelho auto-Strømmen vil automatisk blive slået frå, når det ønskede tidsrum er gået. matiskt när den inställada tiden har gått. Strömmen kommer att stängas av autodel cronodesconectador, máticamente cuando finalice el tiempo La alimentación se desconectará autoals de ingestelde sluimerduur is verstreken. De stroom wordt automatisch uitgeschakeld cotnuigger ofets a

dopo che l'orario di spegnimento ritardato L'apparecchio si spegne automaticamente est éconiée.

ment lorsque la durée du temporisateur L'alimentation se coupe automatiqueschaltet das Gerät automatisch aus. Wenn die Einschlafzeit abgelaufen ist, The power will automatically be turned off when the sleep time is over

QUARTZ TIMER

Регулировать желанное сполиное время. Programe a hora de desativação. på timern. Indstil det ønskede slukketidspunkt.

Ställ in den önskade till/frånkopplingstiden conectador,

Ajuste el tiempo deseado del cronodes-Stel de gewenste sluimerduur in. desiderato,

Regolare l'orario di spegnimento ritardato Poser la durée du temporisateur souhai-

Die gewünschte Einschlafzeit "Sleep" ein-Set the desired "sleep" time.

настроить желанную радиостанцию. Sintonize a estação desejada. Stil ind på den ønskede station. Ställ in den statior du vill lyssna till Sintonice la emisora que desea, Stem op het gewenste station at. Sintonizzare la stazione desiderata. Accorder la station de son choix, Den gewünschten Sender einstellen. Tune to the station of your choice.

ANDIO ANDING AV EN RADIOSÄNDNING. MED EN RADIOUDSENDBLSE. AUDIÇÃO DO RÁDIO. NCHOÑSOBAHNE PANNONEPERAYV.


MET EEN RADIO-UITZENDING. EMPLEO DE UN PROGRAMA DE RADIODIFU-ASCOLTO DI UN PROGRAMMA RADIO. PHONIQUE,

UTILISATION D'UNE EMISSION RADIO VERWENDUNG EINER RADIOSENDUNG. USING A RADIO BROADCAST.

ATIT BO OA SIGUA MED ET BÜND. EMPLEO DE UNA CINTA. ANVÂNDNING AV ETT BAND. **WET EEN CASSETTE** UTILISATION D'UNE BANDE. ASCOLTO DI CASSETTE.

ИСПОЛЗОВАНИЕ ПЛЕНКУ. VERWENDUNG EINES TONBANDS. USING A TAPE.

Устройство автоматически выключается maticamente na hora programada. A energia será cortada do aparelho autodet ønskede tidsrum er gået. matiskt när den inställads tiden har gått. Strømmen vil automatisk blive slået frå, når del cronodesconectador. Strömmen kommer att stängas av automáticamente cuando finalice el tiempo als de ingestelde sluimerduur is verstreken. La alimentación se desconectará auto-De stroom wordt automatisch uitgeschakeld e stato raggiunto. dopo che l'orario di spegnimento ritardato L'apparecchio si spegne automaticamente ment lorsque la durée du temporisateur L'alimentation se coupe automatique-Wenn die Einschlafzeit abgelaufen ist, schaltet das Gerät automatisch aus, The power will automatically be turned off when the sleep time is over.

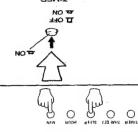

est econice:

Регулировать желанное сполиное время. Programe a hora de desativação. Indstil det ønskede slukketidspunkt. på timern.

OUARTZ TIMER

Ställ in den önskade till/frånkopplingstiden Stel de gewenste sluimerduur in. Ajuste el tiempo deseado del cronodes-

Regolare l'orario di spegnimento ritardato Poser la durée du temporisateur souhai-Set the desired "sleep" time. Die gewünschte Einschlatzeit "Sleep" ein-

O cassete desejado será reproduzido. Выбранный кассет проиграется. Afspil den kilde, der ønskes.

Det band du vill lyssna till kommer att El casete que haya elegido se reproducirá. .blaaqsagis

De door u gekozen cassette wordt nu Viene riprodotta la cassetta desiderata. La bande choisie sera reproduite. Das gewählte Band wird abgespielt. The tape of your choice will be played.

QUARTZ TIMER

Регупировать желанное сполиное время.

Ställ in den önskade till/frånkopplingstiden conectador, Ajuste el tiempo deseado del cronodes-Stel de gewenste sluimerduur in. desiderato, Regolare l'orario di spegnimento ritardato

Poser la durée du temporisateur souhai-Set the desired "sleep" time. Die gewünschte Einschlafzeit "Sleep" ein-

0 0 SUARTZ TIMER

Ajuste o temporizador à hors desejada. Регупировать таймер на желанное время. Indstil timeren til det ønskede tidspunkt. Stall in timeth paiden onskade Programe el temporizador a la hora deseada.

Regolare il timer all'orario desiderato. souhaitè.

Set the timer to the desired time. Den Timer auf die gewünschte Zeit

48

проиграть желанную пленку. Настроить желанную станцию или Sintonize a estação desejada ou insira uma Still ind på den ønskede station eller afspil .llit snævi lliv Ställ in den station eller spela det band du ción el casete que desea. Sintonice la emisora o ponga en reproducfavoriete cassette. Stem op het gewenste station af of kies uw durre la cassetta desiderata. Sintonizzare la stazione desiderata o ripro-

duire la bande de son choix. Accorder la station de son choix, ou reprodas gewünschte Band abspielen. Den gewünschten Sender einstellen oder the tape of your choice. Tune to the station of your choice or play

ФУНКЦИИ И ФУНКЦИИ ТЕЙМЕРА ОДНОВРЕМЕННОЕ ИСПОЛЗОВЕНИЕ СПАЛЬНОЙ

устроиство включается на задфиное время. temporizador foi programado, о арагеlho entrará em operação na hora programada. Когда прошло течение спальной функции устройство выключается. Если отрегулировали тмймер, тогда Hvis timeren er indstillet, vil stremmen blive slået til på det indestillede klokkeslet. Terminada a operaçao com o temporizador de desectivação (função SLEEP), será desligado o aparelho. Se o automatisch worden ingeschakeld.

Uns vez trenscurrido el tiempo (programado en el autodesconectador), la alimentación se desconectará. Si habia programado el temporizador, la alimentación se conectará a la hora programado el temporizador, la alimentación se conectará a la hora programado.

Strómmen stánga su rai tiden har agist (den tid som stálldes in pà timern). Om timem har förinställts, kommer stánga su rai tiden har agist (den tid som stálldes in pà timern). Om timem har förinställts, kommer strómmen att tillkopplas när den installden tiden näs.

När det tidesum er gäet, horareter timemen er indstillet til at slukke, bilver strømmen automatisk slået fra. Hurs timeren er indstillet vil strømmen programmen programmen prinse else tindstillet til si else tides else tindstillet vil strømmen programmen programmen

или проиграется пленка на регулиро-функции и принимеется ракоопередая котда комается темпоментом устройство автоматически выключается устройство автоматически выключается

A energia será cortada automaticamente na hora ajustada no temporizador de desativação, e a recepção de estação desejada ou estação desejada ou iniciada sutomaticamente.

a alimentación se desconectará automática-ca alimentación de la programa radiofónico desconectador y el programa radiofónico o la reproducción de la cinta comenzará

schakeld als de ingestelde sluimerduur is verstreken, Wanneer de ingestelde wektijd op de schakelklok wordt bereikt, zal het geluid van de radio of cassette te horen

De stroom wordt nu automatisch uitgeall'orario fissato. 

L'alimentation se coupe automatiquement lorsque la divide du temporisateur est écoulée et l'émission radiophonique, ou la lecture de la cassette, va commencer ou la lecture de la cassette, va commencer au sont prévious la commence de la cassette, va comment de la cassette de la cas

Des Gerät schaftet nach Ablauf der ein-gestellten Einschlaf-Zeit automatisch aus und schaltet auf Radio- oder Band-

The power will suromatically be turned off when the sleep time is over and the radio broadcast or tape playback will begin at the set time.



Indstil det ønskede slukketidspunkt. Programe a hora de desativação.

Ziel de schakelklok op de gewenste wektijd

Régler la minuterie sur le moment

matiskt när den inställada tiden har gått. del cronodesconectador. Strömmen kommer att stängas av auto-La alimentación se desconectará auto-máticamente cuando finalice el tiempo als de ingestelde sluimerduur is verstreken. De stroom wordt automatisch uitgeschakeld d stato raggiunto. dopo che l'orario di spegnimento ritardato

L'apparecchio si spegne automaticamente est éconlée. ment lorsque la durée du temporisateur

L'alimentation se coupe automatiqueschaltet das Gerät automatisch aus. when the sleep time is over. Wenn die Einschlafzeit abgelaufen ist, The power will automatically be turned off

0 0 0 MIT STAAUO

негулировать желанное сполиное время. Programe a hora de desativação. Indstil det ønskede slukketidspunkt.

conectador. Ställ in den önskade till/frånkopplingstiden Ajuste el tiempo deseado del cronodes-Stel de gewenste sluimerduur in.

desiderato, Regolare l'orario di spegnimento ritardato

Poser la durée du temporisateur souhai-

Set the desired "sleep" time. Die gewünschte Einschlafzeit "Sleep" ein-

Настроить желанную радиостанцию. Sintonize a estação desejada. Still ind på den ønskede station, Ställ in den statior du vill lyssna till. Sintonice la emisora que desea. Stem op het gewenste station af, Sintonizzare la stazione desiderata, Den gewünschten Sender einstellen. Accorder la station de son choix. Tune to the station of your choice,

исползование ралиопередачу.

ASCOLTO DI UN PROGRAMMA RADIO. MET EEN RADIO UITZENDING.

MED EN RADIOUDSENDBLSE. AUDIÇÃO DO RÁDIO.

'NOIS

PHONIQUE,

MET EEN CASSETTE. ASCOLTO DI CASSETTE, UTILISATION D'UNE BANDE, VERWENDUNG EINES TONBANDS. USING A TAPE.

ANVÄ NDNING AV EN RADIOSÄ NDNING. EMPLEO DE UN PROGRAMA DE RADIODIFU-

MED ET BÛND. AUDIÇAO DE FITA.

ИСПОЛЗОВАНИЕ ПЛЕНКУ.

ANYÄNDNING AV ETT BAND.

à slimentation se coupe automatiquement lorsque la durée du temporisateur est als de ingestelde sluimerduur is verstreken. De stroom wordt automatisch uitgeschakeld The set time.

Das Gerät schaltet nach Ablauf der eingestellten Einschlaf-Zeit automatisch aus
und schaltet auf Radio- oder Banddopo che l'orario di spegnimento ritardato other will sutemotisely be turned off the radio when the sleep is never and the radio to tabely and the radio and The power will automatically be turned off 0 0

Регупировать желанное сполиное время. Programe a hora de desativação. Indstil det ønskede slukketidspunkt. , nnemit åq

STEEP HIDE

**SUARTZ TIMER** 

conectador, Ställ in den önskade till/frånkopplingstiden Ajuste el tiempo deseado del cronodes-Stel de gewenste sluimerduur in, desiderato,

Regolare l'orario di spegnimento ritardato stellen. Poser la durée du temporisateur souhai-

Die gewünschte Einschlafzeit "Sleep" ein-Set the desired "sleep" time,

0 SUARTZ TIMER

ямэда эоннепэж вн дэмйвт атваодипутэ Ajuste o temporizador à hora desejada. Indstil timeren til det ønskede tidspunkt. Programe et temporizador a la hora deseada. Ställ in timern på den önskade tiden.

Regolare il timer all'orario desiderato. Stel de schakelklok op de gewenste wektild souhaité.

Régler la minuterie sur le moment instellen

Den Timer auf die gewünschte Zeit Set the timer to the desired time,

проиграть желанную пленку. fita. Настроить желанную станцию или emu erieni uo abajeseb ospetes e exinorniz .band 19 Still ind på den ønskede station eller afspil .Ilii sana till. Ställ in den station eller spela det band du ción el casete que desea. Sintonice la emisora o ponga en reproducfavoriete cassette.

Stem op het gewenste station af of kies uw Sintonizzare la stazione desiderata o ripro-durre la cassetta desiderata. duire la bande de son choix.

das gewünschte Band abspielen. Accorder la station de son choix, ou repro-Den gewünschten Sender einstellen oder the tape of your choice. Tune to the station of your choice or play

ΦλΗΚΠΊΝΝ Ν ΦλΗΚΠΊΝΝ ΤΑΝΜΕΡΑ ОДНОВРЕМЕННОЕ ИСПОЛЗОВАНИЕ СПАЛЬНОЙ ОБЕSATIVAÇÃО.

FUNKTION SAMMEN.

RIZADORES DE ATIVAÇÃO E DE

RIZADORES DE ATIVAÇÃO E DE TILLSAMMANS.

ANYADUNG AV FUNKTIONEN FÖR TILL/ FRÄNKOPPLING OCH TIMERFUNKTIONEN TEMPORIZADOR.

FUNKTIE ALS SCHAKELKLOKFUNKTIE.

EMPLEO DE LA FUNCION DEL CRONO.

DESCONECTADOR JUNTO CON LA DEL **GEBRUIK VAN ZOWEL DE SLUIMER-**

USO CONTEMPORANEO DELLA FUNZIONE DI SPEGNIMENTO RITARDATO E DELLA: FUNZIONE DI TIMER. MINUTERIE.

TION DE TEMPORISATEUR ET DE LA UTILISATION SIMULTANEE DE LA FONC-VERWENDUNG DER EINSCHLAF-FUNKTION UND DER TIMER-FUNKTION ZUSAMMEN. TIMER FUNCTION TOGETHER. USING THE SLEEP FUNCTION AND THE

La alimentación se desconectará auto-

L'apparecchio si spegne automaticamente

schaltet das Gerät automatisch aus, L'alimentation se coupe automatique-ment lorsque la durée du temporisateur

Venn die Einschlafzeit abgelaufen ist,

0

Indstil det ønskede slukketidspunkt.

Programe a hora de desativação. Регулировать желанное сполиное время.

Ställ in den önskade till/frånkopplingstiden

Ajuste el tiempo deseado del cronodes-Stel de gewenste sluimerduur in.

Regolare l'orario di spegnimento ritardato

Poser la durée du temporisateur souhai-

O cassete desejado será reproduzido. Выбранный кассет проиграется.

De qoot n dekozen cassette wordt nu

Viene riprodotta la cassetta desiderata.

The tape of your choice will be played.
Das gewählte Band wird abgespielt.
La bande choisie sera reproduite.

El casete que haya elegido se reproducirá. Det band du vill lyssna till kommer att

Set the desired "sleep" time.

Afspil den kilde, der ønskes.

Die gewünschte Einschlafzeit "Sleep" ein-

OUARTZ TIMER

when the sleep time is over.

cotnuigger ofets 9

est écoulée.

0 0

på timern.

desiderato,

'sejads

.bleeqsegte

VERWENDUNG EINER RADIOSENDUG. UTILISATION D'UNE EMISSION RADIO-USING A RADIO BROADCAST. Ong vez ritanscurvido el tiempo (programado en el autodesconectadori, la silmentación se desconectará. Si habia programado el temporizador, la silmentación se conectará a la hora programada.
Strómmen stânga su nás tiden har gát (den tid som ställdes in på timern). Om timern har forinställts, kommer stånga su nás tiden har gát (den tid som ställdes in på timern). Om timern har forinställts, kommer strómmen stit tillkoppiss när den inställda timeren er indstillet, vil strømmen blive slået til at slukke, bliver strømmen automatisk slået fra. Terminada a operaçeo com o temporizador de desactivação (função SLEEP), será desilgado o sparelho. Se o ferminada soperaçeo com o temporizador desactivação (função SLEEP), será desilgado o sparelho. Se o ferminada soperação com o temporizador desactivação desactivação se programada.
Vorpoñorao se programado, o aparelho entrará em operação de programada.

automatisch worden ingeschakeld. Una vez transcurrido el tiempo (programado en el autodesconectador), la alimentación se desconectará. Si habia l'attivazione del timer. Na het verstrijken van de ingestelde tijdsduur voor de sluimerfunktia wordt het apparaat automatisch uitgeschakeld. Als de schakelklok op een bepaalde inachakeltijd is ingesteld, zal het apparaat op dat tijdstip weer

terie se remet à fonctionner automatiquement.
Prérégler la minuterie à n'importe quelle heure, sauf au moment où l'on souhaite s'endormir. Ainisi, la minuterie me se mettre pas à fonctionner pendant les heures de sommeil.

Quando à trascorso l'orario (per cui era stata regolata la functione di spegnimento ritardato), l'apparecchio si spegne.

Spegne. Se è stato programmato il timer, l'apparecchio si accende quando viene raggiunto l'orario regolato per l'artivazione del timer.

When the time (for which sleep function was set) has elapsed, Power is turned off, If timer has been preset,

GEBRUIK VAN DE SLUIMERFUNKTIE RITARDATO. USO DELLA FUNZIONE DI SPEGNIMENTO UTILISATION DE LA FONCTION DE TEMPO-

VERWENDUNG DER EINSCHLAF-FUNK-

USING THE "SLEEP" FUNCTION.

СТО В ОТТОМАТІСА. ИСПОЛЗОВАНИЕ СПАЛЬНОЙ ФУНКЦИИ UTILIZAÇÃO DA FUNÇÃO DE DESATIVA. NVENDELSE AF SLUKKEFUNKTIONEN PHANKOPPLING AV TIMERN. ANYÄNDNING AV FUNKTIONEN FÖR TILL/ DESCONECTADOR" EMPLEO DE LA FUNCION DEL "CRONO-

8